

Wi-Fi Control Setup

This feature is an option on some units.

Follow these easy steps to set up your air conditioning system's Wi-Fi connection

1. Install the Wi-Fi appliance and turn the system on.
2. Open Android Play Store or IOS App Store on your smart phone. Enter "Smiling Air" in the search bar to find the latest version of the control app. Download and install the app.
3. Follow the Wi-Fi instruction to pair your phone with your air conditioning system.
4. Manage and enjoy complete control over your appliance.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 50 cm (8 in.) between the radiator and your body.

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. It also complies with Part 15 of FCC RF Rules.

This equipment should be installed and operated with minimum distance of 20 in (50 cm) between the radiator and your body. This transmission must not be co-located or operated in conjunction with any other antenna or transmitter.

CAUTION:

To comply with the limits of the Class B digital device, pursuant to Part 15 of FCC Rules, this device is compliant with Class B limits. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION:

To assure continued compliance, any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Label Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Note:

To satisfy FCC exterior labeling requirements, the following text must be placed on the exterior of the end product. "Contains Transmitter module FCC ID: 2AGCCA EH-W4B1".

To satisfy IESD exterior labeling requirements, the following text must be placed on the exterior of the end product. "Contains Transmitter module IC: 20778-AEHW4B1".

